



トナー・カートリッジ交換手順絵解き (PR-L3C550/3C530)

対象消耗品	対象消耗品
PR-L9560C-11	PR-L9160C-11
PR-L9560C-12	PR-L9160C-12
PR-L9560C-13	PR-L9160C-13
PR-L9560C-14	PR-L9160C-14
PR-L9560C-16	PR-L9160C-16
PR-L9560C-17	PR-L9160C-17
PR-L9560C-18	PR-L9160C-18
PR-L9560C-19	PR-L9160C-19

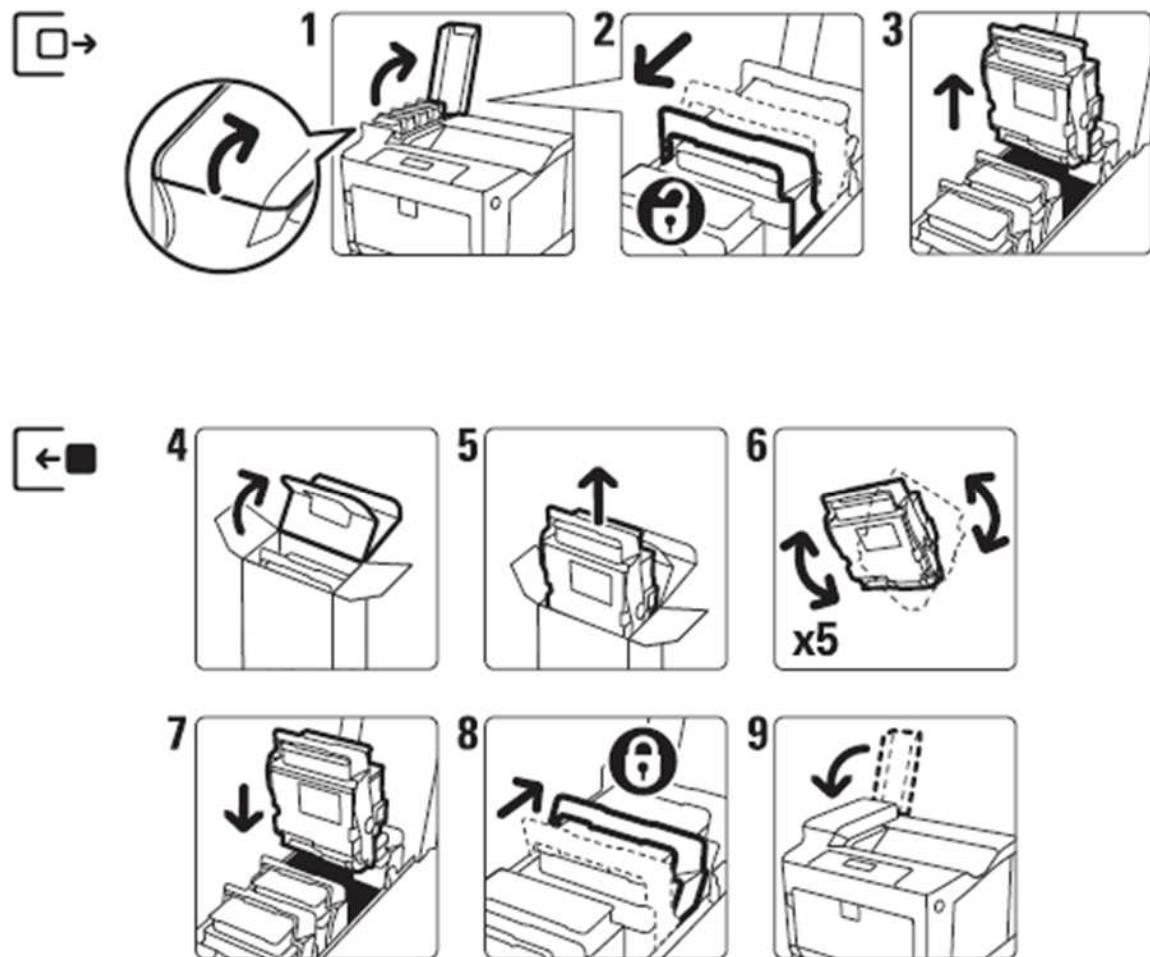


トナー回収ボトル交換手順絵解き (PR-L3C550/3C530)

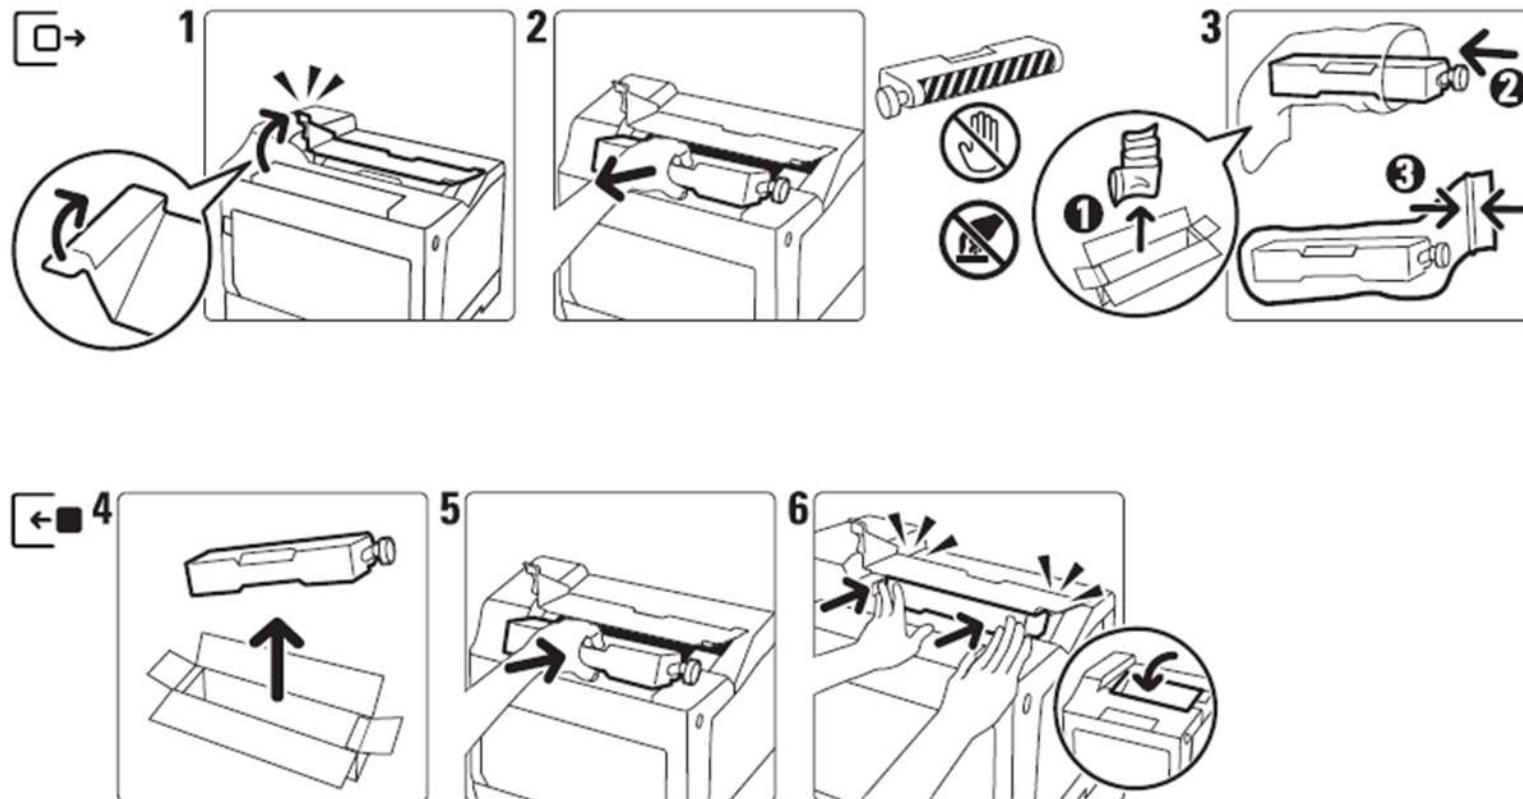

ドラムカートリッジ交換手順・清掃パッド交換手順絵解き (PR-L3C550/3C530)

ドラムカートリッジ交換手順

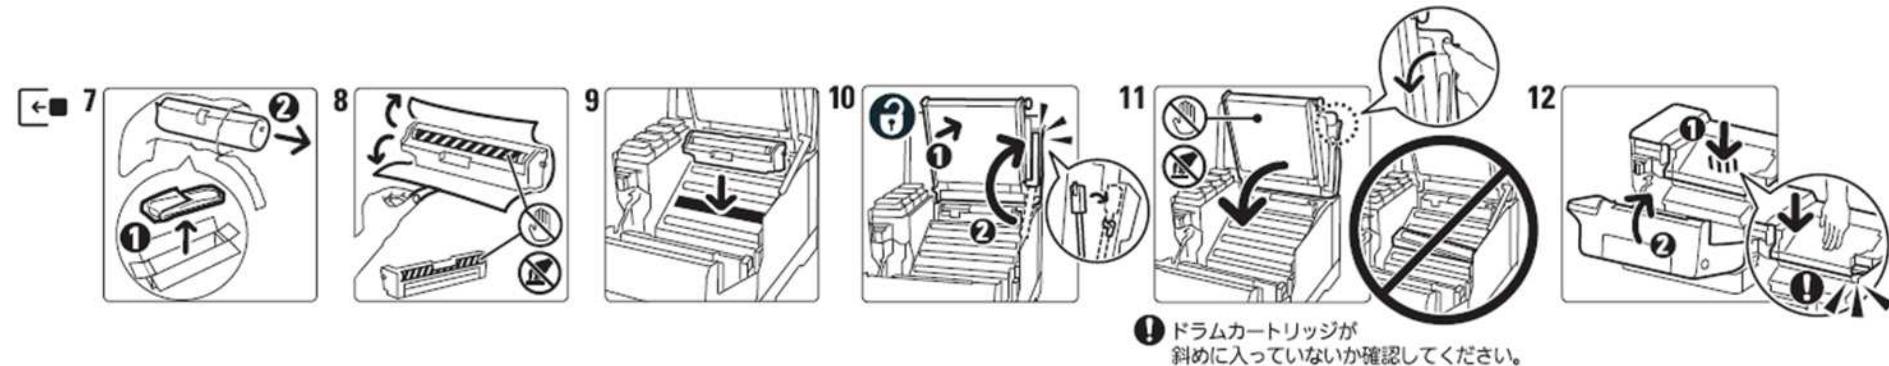

清掃用パッド交換手順

